General Radio

RADIO LAB

238

INSTRUCTION MANUAL

GR 1311-A
Audio Oscillator

F

R. D. D. 238

Condensed Operating Instructions

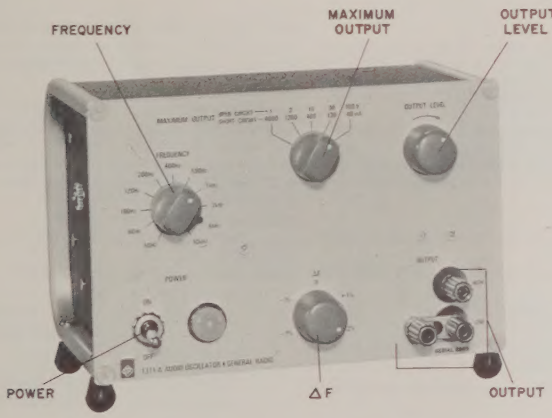

a. Connect the oscillator to a power source with the 3-wire power cord supplied.

b. Connect the load to the OUTPUT terminals.

c. Set the POWER switch to ON.

d. Set the FREQUENCY switch to the center frequency desired.

e. Set the ΔF control to 0 or between 0 and ±2%.

f. Set the MAXIMUM OUTPUT switch to a value in volts or milliamperes that is slightly greater than the amplitude of the voltage or current desired.

g. Rotate the OUTPUT LEVEL control to obtain the desired output level.

Contents

Section 1 INTRODUCTION
1.1 Purpose 4
1.2 Description 4

Section 2 INSTALLATION
2.1 General 7
2.2 Rack Mounting 7
2.3 Power Input 8
2.4 Output Frequency Change . . 9
2.5 Environmental Considerations . 9

Section 3 OPERATING PROCEDURE
3.1 Preparation of Use 10
3.2 Operating Procedure 10

Section 4 PRINCIPLES OF OPERATION
4.1 General 13
4.2 Circuit Design 13

Section 5 SERVICE AND MAINTENANCE
5.1 GR Field-Service 16
5.2 Instruemnt Return 16
5.3 Minimum Performance Standards 16
5.4 Input Power 16
5.5 Removal of Cover 18
5.6 Trouble Analysis 18
5.7 Removal and Replacement . . 19
5.8 Internal Adjustments 20
5.9 AC Power Conversion 20
5.10 Knob Removal and Installation . 22

Copyright 1963 by
GENERAL RADIO COMPANY
Concord, Massachusetts U.S.A.
Form 1311-0100-F
September 1974
ID-5187

SPECIFICATIONS

FREQUENCY

Range: 1311-A, 50 Hz to 10 kHz. Eleven fixed frequencies, 50, 60, 100, 120, 200, 400, and 500 Hz, 1, 2, 5, and 10 kHz. One other frequency can be added at an unused switch position, a Δf control provides ±2% continuous adjustment.

Accuracy: ±1% of setting with Δf control at zero.

Stability (typical at 1 kHz): Warmup drift, 0.3%. After warmup: 0.008% short term (10 min), 0.02% long term (12 h).

Synchronization: Frequency can be locked to external signal. Lock range ±3% per volt rms up to 10 V. The Δf control functions as phase adjustment.

OUTPUT

Voltage: Continuously adjustable from 0 to 1, 3, 10, 30, or 100 V open circuit (E_{oc}).

Power: >1.0 W into matched load, >0.5 W into any resistive load between 80 mΩ and 8 kΩ.

Current: Continuously adjustable from 0 to 40, 130, 400, 1300, or 4000 mA, into approx short circuit (I_{sc}).

Impedance: One to three times $\frac{E_{oc}}{I_{sc}}$, depending on output amplitude. Output isolated from ground.

Distortion: <0.5% with any linear load. Oscillator will drive a short circuit without clipping.

Hum: <0.01%, independent of output setting.

Synchronization: Constant-amplitude (1-V), high-impedance (4.7-kΩ) output to drive counter or oscilloscope.

GENERAL

Power Required: 105 to 125 or 210 to 250 V, 50 to 400 Hz, 30 W.

Terminals: Output, GR 938 Binding Posts and ground terminal with shorting link; sync, side-panel telephone jack.

Accessories Supplied: Power cord, spare fuses.

Accessories Available: Adaptor cable 1560-P95 (telephone plug to double plug), rack-adaptor set.

Mounting: Convertible-bench cabinet.

Dimensions (width x height x depth): 8 x 6 x 7¾ in. (205 x 155 x 200 mm).

Weight: Net, 6 lb (2.8 kg); shipping, 9 lb (4.1 kg).

Catalog Number	Description
	1311-A Audio Oscillator
1311-9701	for 115-V
1311-9702	for 230-V
1560-9695	**1560-P95 Adaptor Cable**
0480-9838	**480-P308 Rack-Adaptor Set**

WARRANTY

We warrant that this product is free from defects in material and workmanship and, properly used, will perform in full accordance with applicable specifications. If, within a period of ten years after original shipment, it is found, after examination by us or our authorized representative, not to meet this standard, it will be repaired or, at our option, replaced as follows:

- No charge for parts, labor or transportation during the first three months after original shipment;
- No charge for parts or labor during the fourth through the twelfth month after original shipment for a product returned to a GR service facility;
- No charge for parts during the second year after original shipment for a product returned to a GR service facility;
- During the third through the tenth year after original shipment, and as long thereafter as parts are available, we will maintain our repair capability and it will be available at our then prevailing schedule of charges for a product returned to a GR service facility.

This warranty shall not apply to any product or part thereof which has been subject to accident, negligence, alteration, abuse or misuse; nor to any parts or components that have given normal service. This warranty is expressly in lieu of and excludes all other warranties expressed or implied, including the warranties of merchantability and fitness for a particular purpose, and all other obligations or liabilities on our part, including liability for consequential damages resulting from product failure or other causes. No person, firm or corporation is authorized to assume for us any other liability in connection with the sale of any product.

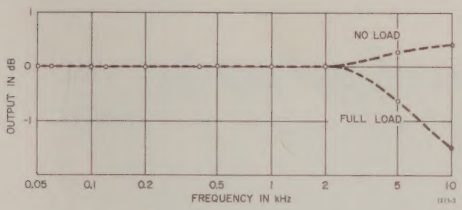

Figure A. Output of Type 1311 as a function of frequency, loaded and unloaded (typical).

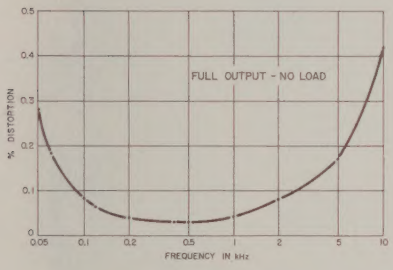

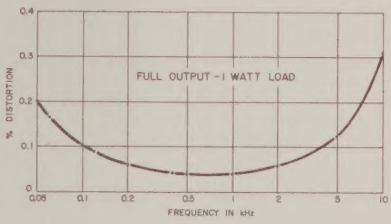

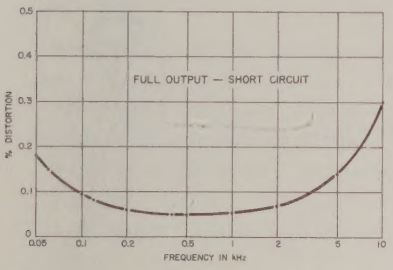

Figure B. Distortion characteristics of Type 1311 as functions of frequency and load (typical).

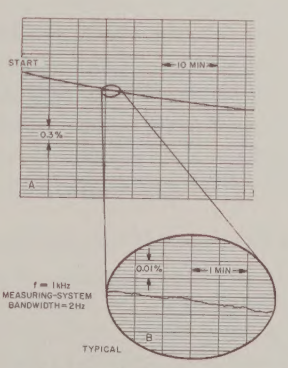

Figure C. Typical output amplitude stability of the oscillator, showing warmup drift (A) and short-term variation (B).

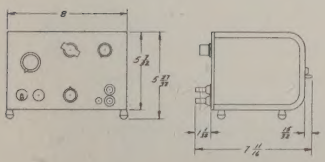

Figure D. Dimensions of the Type 1311.

Introduction–Section 1

1.1 PURPOSE.

1.1.1 General.

The Type 1311 oscillators are complete, compact, and self-contained audio-frequency sources. The Type 1311-A (Figure 1-1) is intended for general laboratory use, and is particularly well suited for use in audio-frequency bridge measurements. Each oscillator produces an essentially pure sinusoidal output, stable in amplitude and frequency, over a wide range of load impedances, at selected frequencies. The Type 1311-A has eleven fixed frequencies and provision for a twelfth, which the user can readily add by installing two precision resistors.

1.1.2 The Type 1311 As Audiometric Oscillator.

The Type 1311 is capable of being used for calibration and testing of audiometric equipment. It will be especially useful for calibration of audiometric earphones, in conjunction with the Types 1933 and 1565 Sound Level Meters, (or the Type 1564 Sound and Vibration Analyzer), the Type 1560-P5 or -P6 (or the Type 1560-P3 or -P4) Piezoelectric Ceramic Microphone, and the Type 1560-P82 (or -P81) Earphone Coupler. The frequencies available from the Type 1311 include most of those commonly used as audiometric test frequencies. Refer to para. 5.8.2 for details on adding a 12th frequency.

1.2 DESCRIPTION.

1.2.1 General.

The Type 1311 is a transistorized RC Oscillator, which makes extensive use of negative feedback to attain amplitude and frequency stability of a high order,

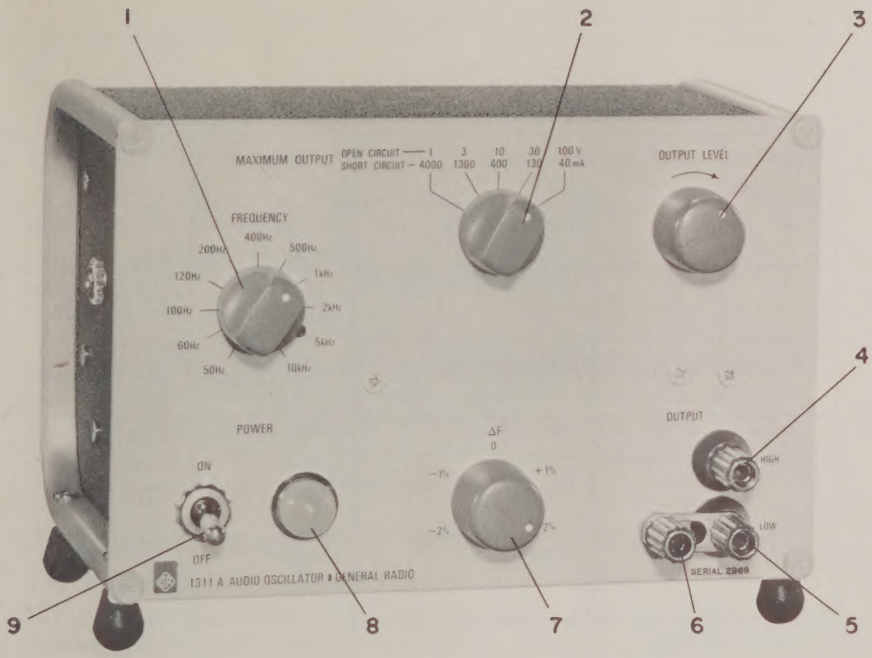

Figure 1-1. Type 1311-A Audio Oscillator.

as well as long-term reliability. The output system uses a multitap shielded transformer capable of matching impedances from 0.25 to 2500 ohms. It is well isolated from the oscillator circuitry to provide a distortion-free waveform to any impedance, including a short circuit.

The instrument is ac powered and uses a regulated solid-state power-supply circuit to provide stable dc to all stages over a wide range of power demands. Operation at ac inputs of 115 or 230 volts can be achieved by selection of appropriate taps on the input winding of the primary power transformer.

The Type 1311 is designed for bench use but can conveniently and inexpensively be altered for rack mounting by the addition of the General Radio Type 480-P308 Adaptor Plate Set (Catalog No. 0480-9838).

1.2.2 Controls.

Front panel controls are listed and described in Table 1-1.

TABLE 1-1
CONTROLS AND INDICATORS

Ref (Fig. 1-1)	Ref Desig	Name	Type	Function
1	S101	FREQUENCY	12-position rotary switch	Selects output frequency.
2	S102	MAXIMUM OUTPUT	5-position rotary switch	Selects output transformer tap.
3	R139	OUTPUT LEVEL	Linear potentiometer	Adjusts output level.
7	R138	Δ F	Linear potentiometer	Adjusts output frequency ±2% about nominal.
9	S501	POWER	Toggle switch	Turns instrument on or off.
8	P501	None	Light	Glows when primary power on.

1.2.3 Connectors.

Connectors provided on the Type 1311 are listed and described in Table 1-2.

TABLE 1-2
CONNECTORS

Ref (Fig. 1-1)	Ref Desig	Name	Type	Function
4-6	J101 thru J103	OUTPUT	Jack-top binding posts (GR Type 938)	Output terminals and ground.
	PL501	None	3-prong plug	Power input terminal.
	J104	None	Telephone	External Sync input

Installation—Section 2

2.1 GENERAL.

The Type 1311-A Audio Oscillator, as supplied, is intended for independent bench use. However, it may be adapted to rack mounting, either independently or in combination with a similarly sized instrument, such as the General Radio Type 1232-A, -AP Tuned Amplifier and Null Detector. This assembly, Type 1240-A, -AP Bridge Oscillator-Detector is convenient for use with audio-frequency bridges and other null-balance devices.

2.2 RACK MOUNTING.

2.2.1 Rack Converting The Type 1311.

The Type 1311 Oscillator can be rack-mounted by itself in a standard 19-inch relay rack by means of Relay Rack Adaptor Set, Catalog Number 0480-9838, or with another convertible-bench instrument by means of Relay Rack Adaptor Set, Catalog Number 0480-9836. To attach the adaptor sets, proceed as follows (see Figure 2-1):

a. Remove the rubber feet, if necessary to clear an instrument below.

b. Remove the screws that secure the front panel to the aluminum end frames.

c. Remove the spacers between the front panel and the end frames. If two instruments are to be mounted side by side, join them as follows: (otherwise proceed to step f):

d. On one instrument, install clips with the front-panel screws removed earlier. Remove the cover of this instrument and thread the nylon screw through the hole in the side panel on the same side as the clips.

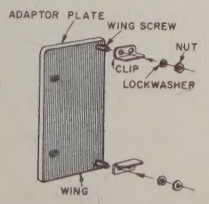

Figure 2-1a. Rack adapting the Type 1311.

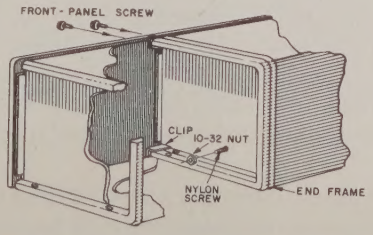

Figure 2-1b. The Type 1240.

e. Secure the two instruments together with front-panel screws through the remaining hole in each clip. Remove the cover of the second instrument, thread the nut onto the nylon screw, and tighten. Note that the instruments can be bench-mounted side by side in this manner. Simply do not remove the two feet from each outside end frame and do not install the adaptor plates.

f. Install two clips on each adaptor plate with the wing screws, lockwashers, and nuts supplied.

g. Attach the adaptor plates to the instrument with the front-panel screws removed earlier.

h. Mount the assembly in the rack with the 10-32 screws supplied.

2.2.2 Mounting The Type 1620-A, -AP.

The Type 1311 oscillator is an integral part of the Type 1620-A, -AP Capacitance-Measuring Assembly. To assemble a Type 1620-AP, a Type 1232 Detector, Type 1232-P2 Preamplifier, Type 1615 Bridge, Type 4177-1621 System Cabinet and Type 1620-A, a Type 1232 Detector, Type 1615 Bridge, Type 4177-1620 System Cabinet and Type 1620-A hardware set are needed. Proceed as follows:

a. Follow steps a through e in paragraph 2.2.1 for a 1620-A installation, or steps a through l of the Type 1240-AP assembly procedure in the Type 1232-P2 Instruction Manual, for a 1620-AP installation.

b. Insert the "ears" of the mounting plates included in the Type 1620-A or -AP hardware set in the spaces between the front panels and the end frames of the Type 1311 and Type 1232.

c. Replace all remaining front panel screws.

d. Mount the Type 1615 in the lower part of the system cabinet using eight panel screws with natural Nylon cup washers.

e. Mount the 1311-1232 combination in the upper portion of the cabinet using four panel screws with Nylon cup washers.

2.3 POWER INPUT.

2.3.1 Normal Operation.

The instrument is fitted with a power-connector that is in conformance with the International Electrotechnical Commission publication 320. The 3 flat contacts are surrounded by a cylindrical plastic shroud that eliminates the possibility of electrical shock whenever the power cord is being unplugged from the instrument. In addition, the center ground pin is longer, which means that it mates first and disconnects last, ensuring greater user protection from electric shock.

The panel connector is a standard 3-pin grounding -type, the design of which has been accepted world wide for electronic instrumentation, and is rated for 250 V at 6A. It also meets requirements of Underwriter's Laboratories in the

U.S. and the Canadian Standards Association. The receptacle accepts power cords fitted with the Belden type SPH-386 connector.

The associated power cord is GR part no. 4200-9625. It is a 7-ft, 3-wire, 18-gauge unit with connector bodies molded integrally with the jacket. The connector at the power-line end is a stackable hammerhead design that conforms to the "Standard for Grounding Type Attachment Plug Caps and Receptacles," ANSI C73.11-1963.

The power cord supplied should be attached to PL501 on the rear panel and plugged into a standard grounding-type power receptacle providing 105-125 volts at 50 to 400 Hz.

2.3.2 Higher Voltage.

The instrument may be operated at ac inputs from 210 to 250 volts, provided that minor wiring and fuse changes described in Section 5 have been performed.

2.4 OUTPUT FREQUENCY CHANGE.

To add a 12th audio output frequency (Type 1311 only), or to change any of the existing fixed frequencies, resistor pairs in the Wein-bridge circuit may be installed, or replaced, as described in Section 5.

2.5 ENVIRONMENTAL CONSIDERATIONS.

2.5.1 Temperature.

The Type 1311 will operate within specifications over an ambient temperature range of 0 to 50 C. It is not affected by humidity.

2.5.2 External Fields.

Since the Type 1311 is often mounted with the sensitive Type 1232-A Null Detector, stray magnetic and electrostatic fields should be kept to a minimum by suitable shielding, and orientation of signal leads. A wire loop is included (internally) near the output terminals to cancel the magnetic field resulting from the ¾-inch spacing of the output terminals, and will prevent magnetic pickup in the adjacent null detector, even at high current levels, if a General Radio Type 274-MB Shielded Output Cable is used. Alternatively, the Type 1311 can be mounted at the right-hand side of the Type 1232-A, to place the output circuit as far as possible from the detector input terminals.

Operating Procedure—Section 3

3.1 PREPARATION FOR USE.

3.1.1 Power Connections.

Connect the Type 1311 to a suitable source of power as indicated on the plate above the power receptacle on the rear panel.

3.1.2 Grounding.

The instrument should normally be operated with the chassis grounded through the three-wire power cord. If the cord is not used, make the ground connection at J103 (6, Figure 1-1) on the front panel, if required.

3.1.3 Output Connection.

Take the oscillator output from the jack-top binding post pair J101 – J102 (4 and 5, Figure 1-1). J101 is always used above ground, but J102 may be grounded or ungrounded, depending on the requirements of the test setup in use. A captive shorting-link affixed to J103 may be attached to J102, if it is desired to work one side of the output against ground. However, if ground loops pose a problem, disconnect the shorting link from J102 to achieve a completely isolated "floating" output.

3.1.4 Output-Shielding Accessories.

In applications in which stray pickup is apt to be troublesome, use of a shielded patch cord is suggested. The General Radio Type 274-NL Patch Cord, a polarized 3-foot shielded cable with a shielded double plug at each end, is available for this purpose.

3.2 OPERATING PROCEDURE.

3.2.1 Turn-On.

Place the POWER switch (9, Figure 1-1) in up position; the lamp immediately to the right should glow.

NOTE

No extensive warm-up time is required; a few seconds is sufficient.

3.2.2 Frequency Selection.

Set the FREQUENCY switch (1, Figure 1-1) to the desired frequency. Use the ΔF control (7, Figure 1-1) to adjust the selected frequency over a range of approximately ±2% of nominal. The frequency of the output waveform is within ±1% of the panel engraving, with the ΔF control set at 0. For greater precision monitor the output with a counter, such as the General Radio Type 1191 counter.

3.2.3 Power Selection.

Set the MAXIMUM OUTPUT switch (2, Figure 1-1) to a value in volts or milliamperes (as screened on the front panel) that is slightly greater than the amplitude of the voltage or current desired. Then, rotate the OUTPUT control (3, Figure 1-1) to make the fine adjustment. The OUTPUT control sets the output at zero in its fully counterclockwise position, and rotated to its fully clockwise position provides a continuous linear increase up to the value of the MAXIMUM OUTPUT control setting.

The maximum power output is approximately 1.1 watt, so that bridges with 1-watt ratio arms, such as most General Radio bridges, can not be damaged by overload. At least 0.58 watt of signal power can be supplied to any load between 80 milliohms and 8 kilohms, with the appropriate setting of the output switch. See Figure 3-1 for a plot of these values.

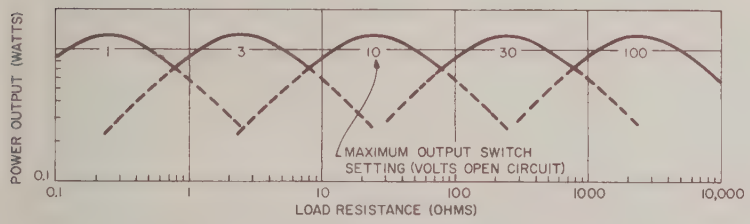

Figure 3-1. Typical power output as a function of load resistance.

3.2.4 Impedance Matching.

Any setting of the output controls can be used with any load impedance without overloading the oscillator circuits. Even with a short circuit across the output terminals, the oscillator will still supply a sinusoidal current of the value indicated by the MAXIMUM OUTPUT control. This feature is particularly convenient when the oscillator is used as a source for ac bridge measurements, since it means that the output controls can be set to any position, and the waveform will not be distorted by mismatching.

The output winding is shielded from the oscillator circuits and may be used ungrounded, or grounded at a remote point. The latter procedure is recommended when the oscillator is used in bridge measurements, to eliminate circulating ground currents, which can cause errors.

The nominal source resistance is a function of the transformer tap selected by the MAXIMUM OUTPUT control setting and the position of the OUTPUT control. Figure 3-2 shows the relationship.

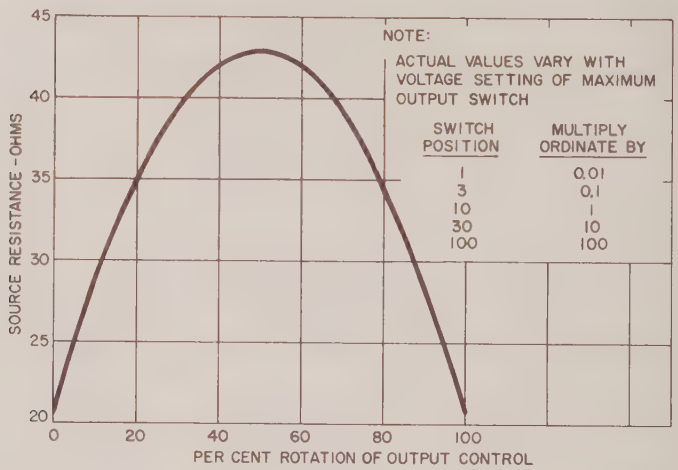

Figure 3-2. Source resistance as a function of output control settings.

3.2.5 Frequency Synchronization.

A telephone jack (J104) on the left side wall of the cabinet is provided to permit injection of an external standard frequency to control the output frequency of the Type 1311. This is particularly useful to drive the Type 1615-A Capacitance Bridge when making precise measurements of frequency-sensitive parameters such as dissipation factor. A 1-volt signal will result in a locking range of approximately ±3%. For larger synchronizing signals, a resistor should be added in series with the signal lead. Use the following equation to calculate the value of the resistor required.

$$R \text{ (in kilohms)} \approx 5 \text{ (Sync Volts} - 1)$$

The dc voltage on the reference signal should not exceed +50 volts. For additional information on synchronization, write for Instrument Note 109.

The 1-watt amplifier and matching transformer of the 1311-A can be driven by any of the 1300 oscillator series between 50 and 10,000 Hz. Set the 1311-A's FREQUENCY switch to the blank position and plug the external oscillator into the sync jack.

Principles of Operation–Section 4

4.1 GENERAL.

The Type 1311-A Audio Oscillators use a Wien-type network and a closed-loop, transistor-amplifier circuit to obtain a stable yet inexpensive signal source which will satisfy many oscillator requirements in the audio-frequency spectrum. See Figure 4-1 for a simplified diagram and Figure 5-2 for the complete schematic.

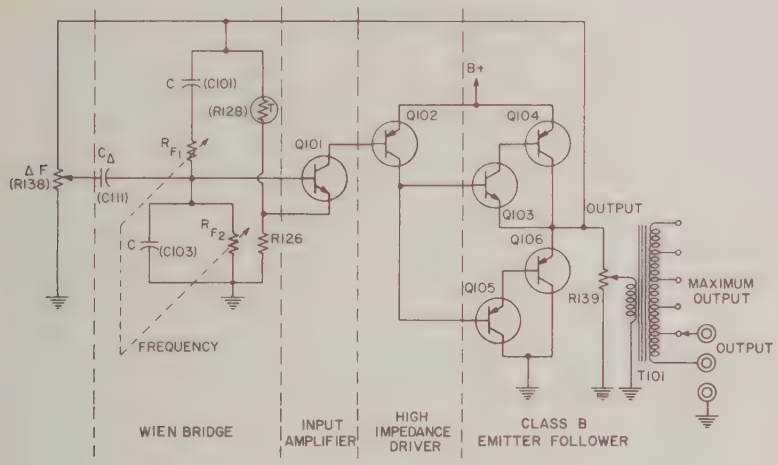

Figure 4-1. Simplified schematic diagram.

4.2 CIRCUIT DESCRIPTION.

4.2.1 Frequency-Determining Network.

The Wien-bridge circuit can be thought of as consisting of two parts: a frequency-determining network (C101, C103 and paired resistors R_{F1}.R_{F2}), which provides positive feedback to sustain oscillation, and a resistive divider (R128 and R126) which provides negative feedback to stabilize amplitude.

The frequency-determining network has a transfer function:

$$\frac{e_{OUT}}{e_{IN}} = \frac{RCs}{1 + 3RCs + R^2C^2s^2}$$

where $s = j2\pi f$
$R = R_{F1} = R_{F2}$
$C = C101 = C103$

At some oscillator frequency, f_o, this function equals +1/3. The frequency is determined by any of 11 pairs of precision metal-film resistors, R_{F1}, R_{F2}, selected by the FREQUENCY switch. With this circuit, frequency can be adjusted over a 200-to-1 range simply by changes in resistors. The frequency vernier adjustment, ΔF, is potentiometer R138, which controls the signal voltage on CΔ (C111), one of the capacitors in the network.

The resistive divider is used to set the gain of the associated amplifier chain to +3. The net loop gain is then +1 and the circuit oscillates at the frequency f_o.

A small bead thermistor, R128, automatically adjusts its resistance to the value needed to maintain oscillations. Its time constant is short enough to provide rapid correction for amplitude variations, yet long enough to cause little distortion at the lower frequencies. It operates at a high temperature, in an evacuated bulb, to minimize the effects of ambient temperature. This thermistor, used with the high-stability, low-noise amplifier described below, results in an oscillator with amplitude (modulation) noise typically less than 0.01% rms.

4.2.2 Amplifier.

The amplifier uses six transistors in a single, direct-coupled feedback loop. The input circuit is chosen for low-noise performance. Transistor Q102 provides a high-impedance drive for the class-B output stage, and achieves a minimum of crossover distortion, yet does not require complicated, temperature-sensitive biasing networks. Negative feedback is used to obtain a transfer characteristic which is substantially independent of transistor characteristics, resulting in excellent stability, low distortion, and long-term reliability. Components R132, C107, and C108 comprise a phase-compensation network used to maintain high-frequency stability in view of the large amount of negative feedback involved.

The input impedance of the amplifier is approximately 10 megohms. The output impedance is approximately 0.005 ohm, so that changes in load have very little effect on the oscillator.

4.2.3 Output Transformer.

The winding resistance of the output transformer, T101, isolates the oscillator from the load and ensures that the output waveform will not be clipped under any load condition. The output winding is tapped to provide five switch-selectable, output-voltage ranges to match a wide variety of load requirements.

The output winding is doubly shielded from the oscillator circuits for isolation, when the output is used off ground (floating). A simplified schematic diagram of the output circuit is shown in Figure 4-2.

The second shield is used to minimize possible current flow through the distributed capacitance, C_{FL} (≈500pf), thence through an external circuit ground. The resulting floating potential, E_{FL}, of the output winding is less than 0.25 volt.

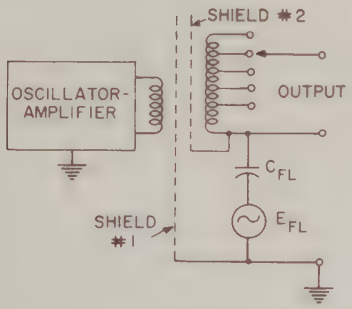

Figure 4-2. Simplified schematic diagram of output circuit.

4.2.4 Power Supply.

Power transformer, T501, is used to apply 25.5 v ac to a silicon-diode bridge-rectifier and filter circuit. The filtered dc output passes through a simple regulator circuit, made up of Q501, Q502, and CR505, a zener diode. The supply provides a low-impedance, ripple-free, 20-v dc source to power the oscillator circuitry. The hum level of the oscillator output is typically 90 db below rated output signal value.

Service and Maintenance—Section 5

5.1 GR FIELD SERVICE.

Our warranty (at the front of this manual) attests the quality of materials and workmanship in our products. When difficulties do occur, our service engineers will assist in any way possible. If the difficulty cannot be eliminated by use of the following service instructions, please write or phone the nearest GR service facility (see back page), giving full information of the trouble and of steps taken to remedy it. Describe the instrument by type, serial, and ID numbers. (Refer to front and rear panels.)

5.2 INSTRUMENT RETURN.

Before returning an instrument to General Radio for service, please ask our nearest office for a "Returned Material" number. Use of this number in correspondence and on a tag tied to the instrument will ensure proper handling and identification. After the initial warranty period, please avoid unnecessary delay by indicating how payment will be made, i.e., send a purchase-order number or (for transportation charges) request "C.O.D."

For return shipment, please use packaging that is adequate to protect the instrument from damage, i.e., equivalent to the original packaging. Advice may be obtained from any GR office.

5.3 MINIMUM PERFORMANCE STANDARDS.

The Type 1311 in normal operation should perform within the standards described in Table 5-1. Table 5-2 lists the test equipment required to check minimum performance. If the instrument does not meet minimum performance standards, refer to paragraph 5.6 for trouble analysis procedures.

5.4 INPUT POWER.

The input power at 115/230 volts 60 Hz normally should not exceed 7 watts no load and 30 watts with the terminals short-circuited and the OUTPUT control fully clockwise.

TABLE 5-1
MINIMUM PERFORMANCE STANDARDS FOR TYPE 1311-A

TEST	FREQUENCY SWITCH POSITION	MAXIMUM OUTPUT SWITCH POSITION	OUTPUT CONTROL POSITION	ΔF POSITION	LOAD	NORMAL INDICATION	IF INDICATION ABNORMAL
Frequency Accuracy	All	10 v	cw stop	0	None	Using frequency counter or meter, check that the frequency is within ±1% of nominal value.	Refer to para 5.6.
Δf Control	1 kHz	10 v	cw stop	-2%, 0, +2%	None	Using frequency counter or meter, check that frequency change is approximately plus and minus 2%.	Refer to para 5.6.
Output Voltage	1 kHz	10 v	cw stop	0	None	Using VTVM, check that output voltage is greater than that indicated by MAXIMUM OUTPUT Control.	Adjust by means of R129 (para 5.8.1).
Output Voltage	All	10 v	cw stop	0	None	Using VTVM, check that output voltage is greater than 10 volts.	Adjust by means of R129 (para 5.8.1).
OUTPUT Control	1 kHz	All		0	None	Using VTVM, check that output voltage can be adjusted by OUTPUT Control from 0 to 10 v.	Refer to para 5.6.
Output Power	1 kHz	10 v	cw stop	0	Power Output Meter	Using Power Output Meter, check that output power is greater than 1.0 watt into some impedance near 25 Ω.	Adjust by means of R129 (para 5.8.1).
Output Distortion	50 Hz 1 kHz 10 kHz	10 v	cw stop	0	(None) (25 Ω) (1 Ω)	Using Distortion Meter, check that distortion is less than 0.5%.	Refer to para 5.6.
Synchronization	1 kHz	10 v	cw stop	0	None	Apply 1-v, 1-kHz signal to J104. With oscilloscope at OUTPUT, vary ext.-oscillator freq. Type 1311 should remain locked over a 5% range (approx)	Refer to para 5.6.

TABLE 5-2
TEST EQUIPMENT REQUIRED

Description	Recommended GR Type Numbers*
Frequency Counter	1191
Vacuum Tube Voltmeter	1806-A
Distortion and Noise Meter or Wave Analyzer	1932-A, or 1900-A
Output-Power Meter	1840-A
Variable-Frequency Audio Oscillator	1310-A
Oscilloscope	Laboratory quality, min bandwidth 1 kHz, min vert sensitivity 5 v/cm
Multimeter	Sensitivity 20,000 ohms/v

*Or equivalent

5.5 REMOVAL OF COVER.

To remove the cover, loosen the two captive thumb screws on the rear of the case and pull straight back.

5.6 TROUBLE ANALYSIS.

Perform the following procedures to isolate defects causing instrument malfunction as indicated by paragraphs 5.3 and 5.4. See Figures 5-1 through 5-5 for circuit function and part location.

a. Disconnect primary power and remove cover.

b. Check fuse F502; replace if defective.

c. Visually check detail parts inside instrument for obvious defects, such as broken leads or charred surfaces. Repair or replace, as necessary.

d. Reapply primary power and, with multimeter, check for 25 v ac across anchor terminals AT501 and AT502.

CAUTION

Semiconductor elements can be damaged by transients resulting from the insertion of instrument probes. Always turn off the power before connecting any test equipment to other than the output terminals. Restore power when connection is made.

e. Switch multimeter to dc scale and check voltages as indicated on Figure 5-2. For accessibility of test points on etched-circuit board, see Figure 5-5.

NOTE

Complete circuit is enclosed in a single dc feedback loop, so that failure of one component will probably cause all voltages to differ considerably from the values shown.

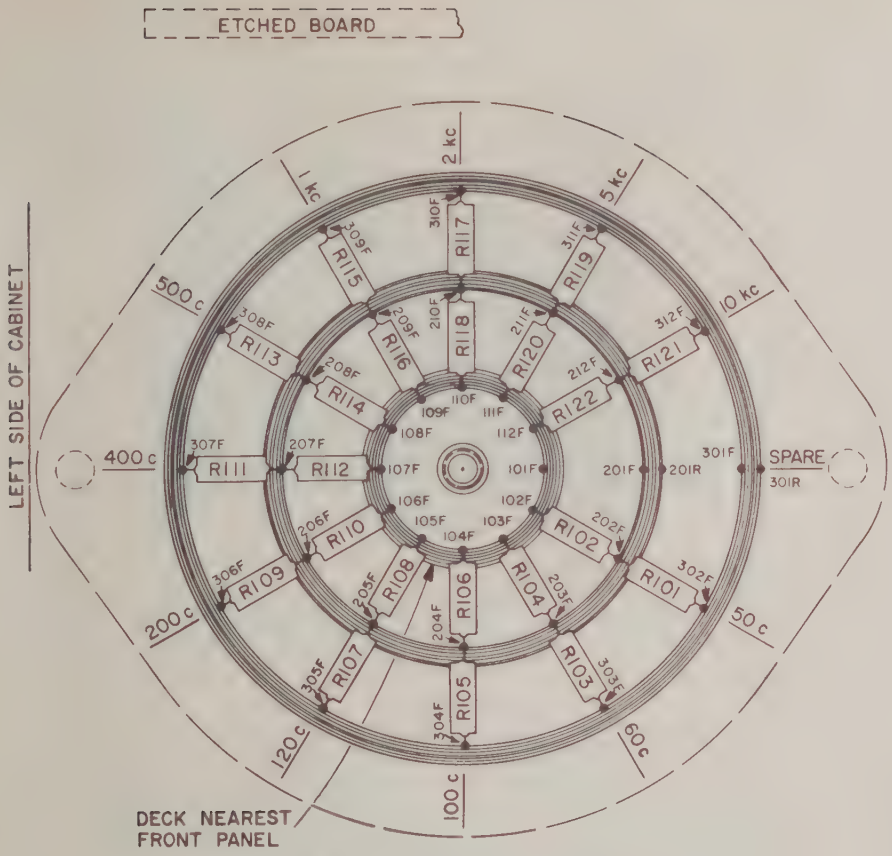

Figure 5-1. Wiring diagram for FREQUENCY switch S101 on the Type 1311-A.

5.7 REMOVAL AND REPLACEMENT.

5.7.1 General.

Faulty parts should be removed and replaced by units meeting the description given in the Parts List at the end of this section.

5.7.2 Semiconductors.

Since the expected life of the semiconductor elements in the Type 1311 is comparable to that of other components, they are soldered into the circuit boards. As a general rule, it is much safer to determine the faulty semiconductors from over-all circuit test, rather than to remove them individually for testing.

CAUTION

Transistors are easily damaged by excessive heat; exercise care when unsoldering them.

5.7.3 Pilot Light.

The pilot light (P501) is operated well below its rated voltage. If a change is required, unscrew the red cap from the front of the panel and replace the light with a Mazda #44.

5.8 INTERNAL ADJUSTMENTS. (See Figures 5-2 through 5-5.)

5.8.1 Oscillator Level.

R129, a secondary control used to adjust oscillator power level, is a screwdriver-adjustable potentiometer mounted on the underside of the etched circuit at its inside edge. With the dust cover removed, it is accessible from the bottom of the instrument.

R129 should be set so that the no-load output voltage, as indicated by a VTVM across the OUTPUT terminals, is approximately 5% higher than the value indicated by the MAXIMUM OUTPUT switch, when the OUTPUT control is turned fully clockwise.

5.8.2 Oscillator Frequency.

Any frequency between 50 hertz and 10 kHz can be added to those provided on the Type 1311-A, by the installation of two precision resistors, R_F, whose values can be determined from the following relation:

$$R_F = 1.61 \times 10^3 \frac{(1\ \text{kHz})}{(f_{\text{kHz}})}$$

To utilize the twelfth position of the FREQUENCY selector switch, first calculate the value of the resistors required. For example, if a 600-Hz output is wanted, then

$$R_F = 1.61 \times 10^3 \frac{(1)}{(0.6)} = 2.68 \text{ kilohms.}$$

The resistors must be mounted on the FREQUENCY switch (S101). An unused position (between the 50-Hz and 10-kHz positions) is provided for this purpose. Before installing the resistors on S101, remove the jumper between contacts 101F and 201F. The contacts 101F, 201F, and 301F may be reached from the bottom of the instrument. See Figure 5-1 for switch details.

5.9 AC POWER CONVERSION.

5.9.1 General.

The Type 1311 is available from the factory wired either for use with inputs of 105 to 125 or 210 to 250, 50 to 400 Hz. However, if the user wishes to convert the instrument from one power option to the other, it is necessary merely to change wiring to the power-transformer input winding from power switch S501 and replace fuses.

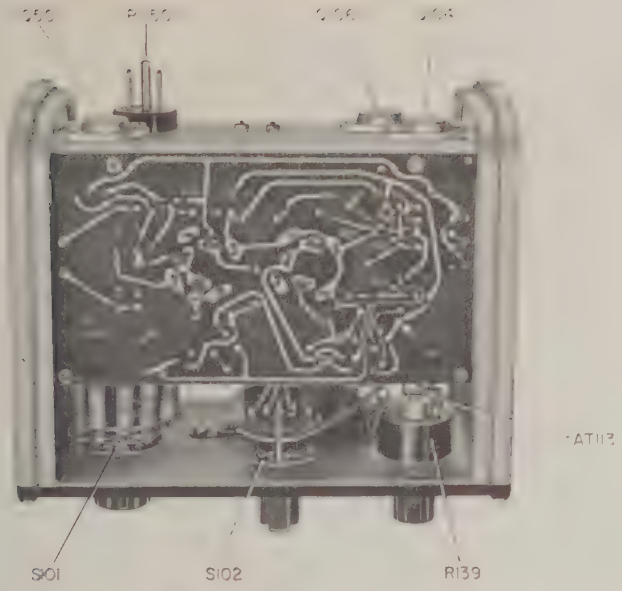

Figure 5-3. Top rear interior view.

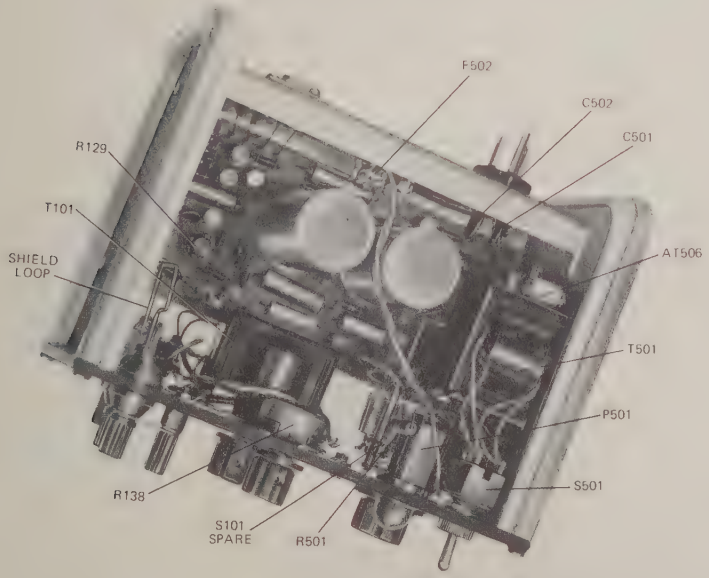

Figure 5-4. Bottom rear interior view.

WARNING

Pull the power cord from the receptacle before performing the following procedures.

5.9.2 Transformer Wiring.

Remove the dust cover and place the instrument upside down on the bench. The input transformer (T501) is mounted on the side wall.

For 115-volt operation, transformer leads 1 and 3 should connect to lug 5 on S501 and leads 2 and 4 to lug 6 on S501. For 230-volt operation, lead 1 connects to lug 5, lead 4 to lug 6, and leads 2 and 3 are joined at anchor terminal AT506.

5.9.3 Fuses.

A fuse, F502, mounted on the inside of the vertical panel at the top rear, protects the instrument from electrical overload. It is accessible from the bottom, also. For 115 v, use 0.3 amp fuses; and for 230 v, use 0.15 amp fuses.

5.10 KNOB REMOVAL AND INSTALLATION.

To remove a knob, proceed as follows:

a. Grasp knob firmly with fingers, close into panel and pull straight away from the panel.

b. Observe position of bushing setscrew with respect to any panel markings, release setscrew and pull bushing off shaft. To install a knob, proceed as follows:

a. Mount bushing using paper as a shim.

b. Orient setscrew to markings noted when it was removed. Tighten setscrew. The shaft must not protrude through bushing.

c. Place knob on bushing with retention spring opposite setscrew.

d. Push knob in until it bottoms and pull it slightly to check spring retention. If knob-retention spring comes loose, reinstall it in interior notch with small slit in outer wall.

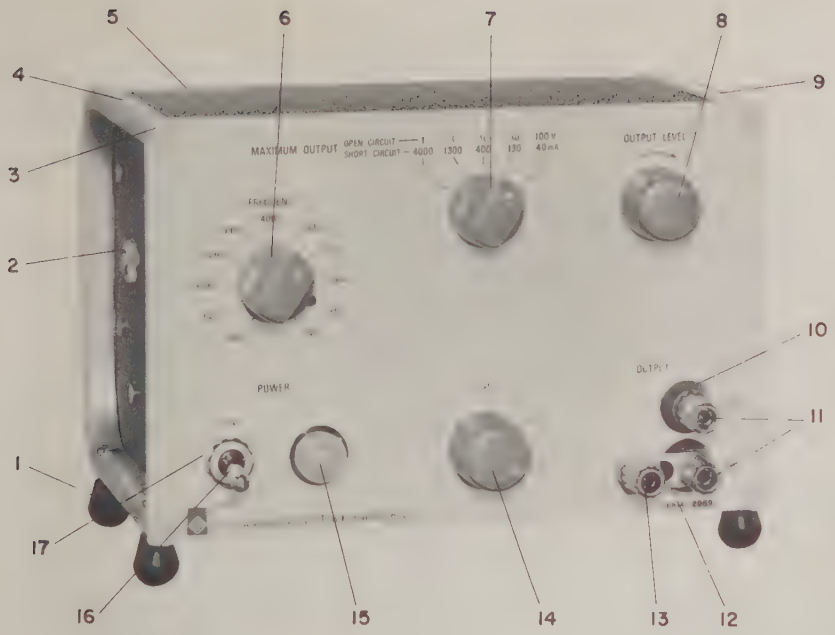

MECHANICAL PARTS LIST

Figure Reference	Description	GR Part Number	Fed Mfg. Code	Mfg. Part No.	Fed. Stk. No.
1	FOOT, rubber, soft, No. 10-32 top, 4 required	5260-0700	24655	5260-0700	5340-738-6329
2	NUT, dress, 3/8-32	5800-0805	24655	5800-0805	
3	SCREW, Phillip-head with washer No. 10-32, 1/2-in., 4 required	7098-0160	24655	7098-0160	
	WASHER (between panel and end frame) metal, No. 10, 4 required	8100-1517	24655	8100-1517	
4	END FRAME, left	5310-3065	24655	5310-3065	
5	DUST COVER Assembly	4429-1500	24655	4429-1500	
6, 7	KNOB (includes tension spring), bar, white dot and line	5500-5321	24655	5500-5321	
	BUSHING (includes setscrew), metal	4143-3121	24655	4143-3121	
	TENSION SPRING	5220-5402	24655	5220-5402	
8, 14	KNOB (includes tension spring), skirted, white dot and line	5520-5321	24655	5520-5321	
	BUSHING (includes setscrew), metal	4143-3121	24655	4143-3121	
	TENSION SPRING	5220-5402	24655	5220-5402	
	WASHER, metal, No. 1/4	8100-0400	24655	8100-0400	5340-984-1081
9	END FRAME, right	5310-3064	24655	5310-3064	
10	INSULATOR, gray, 4 required	0938-7130	24655	0938-7130	
11	BINDING POST ASM.	0938-3000	24655	0938-3000	
12	SHORTING LINK, metal	5080-4800	24655	5080-4800	5940-927-7452
13	BINDING POST ASM.	0938-3022	24655	0938-3022	
15	PILOT LAMP CAP, red	5620-0800	72619	95-935 Cap (Unfluted)	
16	SWITCH, toggle, double-pole single-throw	7910-1300	04009	83053-SA	5930-909-3510
17	NUT, dress, 15/32-32	5800-0800	24655	5800-0800	5310-344-3634

FEDERAL MANUFACTURER'S CODE

From Federal Supply Code for Manufacturers Cataloging Handbooks H4-1
(Name to Code) and H4-2 (Code to Name) as supplemented through August, 1968

Code	Manufacturer
00192	Jones Mfg Co Chicago Illinois
00194	Wanco Electronics Corp, L A , Calif
00434	Schweber Electronics, Westburg, L I N Y
00656	Aerovox Corp, New Bedford, Mass
00779	Amp Inc , Harrisburg Pa , 17105
01009	Arden Products Co, Brockton, Mass
01121	Allen Bradley Co Milwaukee Wisc
01236	Leeds Radio Company N Y
01255	Litton Industries Inc Beverly Hills, Calif
01295	Texas Instruments Inc Dallas Texas
02114	Ferroxcube Corp Saugerties N Y 12477
02606	Fenwal Lab Inc Morton Grove Ill
02660	Amphenol Electron Corp, Broadview Ill
02768	Fastex Des Plaines Ill 60016
03047	Garner Ink Co Camli Mass 02142
03508	G E Semicon Prod, Syracuse, N Y 13201
03636	Grayburne, Yonkers N Y 10701
03888	Pyrofilm Resistor Co, Cedar Knolls N J
03911	C Amra Corp, New York N Y 10001
04009	Arcwe Harl & Hegeman Hart Conn 06106
04643	Dialtronics Corp , Albertson, N Y 11507
04713	Motorola Phoenix Arriz 85008
05170	Engr d Electronics Santa Ana Calif 92702
05624	Barber Colman Co Rockford, Ill 61101
05748	Barnes Mfg Co, Mansfield, O 44901
05820	Wakefield Eng, Inc, Wakefield, Mass 01880
06743	Clevite Corp Cleveland, O 44110
06751	Nuclear Corp, of America, Inc Phoenix Arriz
07126	Digitron Co Pasadena Calif
07127	Eagle Signal IE W Bliss Co I Baraboo Wisc
07233	Cinch Graph ic, City of Industry, Calif
07261	Avnet Corp Culver City, Calif 90230
07263	Fairchild Camera Mountain View, Calif
07387	Bircher Corp, No Los Angeles Calif
07595	Amer Semicond Arrington Hts, Ill 60004
07828	Bodine Corp Bridgeport, Conn 06605
07829	Bodine Electric Co Chicago Ill 60618
07910	Cons Device Corp, Hawthorne Calif
07983	State Labs Inc, N Y N Y 10003
07999	Borg Inst , Delavan, Wisc 53115
08730	Viminaline Prod Co Franklin Lakes, N J
08213	G E Semiconductor Buffalo N Y
08408	Star Tronics Inc Georgetown, Mass 01830
08872	Burgess Battery Co, Freeport Ill
08922	Burndy Corp Norwalk, Conn 06852
11236	C T S of Berne Inc, Berne, Ind 46711
11599	Chandler Evans Corp, W Hartford, Conn
12040	National Semiconductor, Danbury, Conn 120
12065	Trans tron Electronic Corp., E Boston Mass
12498	Crystalonics Cambridge, Mass 02140
12617	Hamlin Inc , Lake Mills, Wisc 53551
12642	RCA Woodbridge, N J
12697	Clarostat Mfg Co, Inc, Dover N H 03820
12954	Dickson Electronics Scottsdale Arriz
13327	Solitron Devices, Taipan N Y 10983
14433	I T T Semiconductors W Palm Beach Fla
14655	Cornell Dubilier Electric Co Newark N J
14674	Corning Glass Works, Corning, N Y
14936	General Instrument Corp, Hicksville N Y
15115	Microdot Magnetics Inc, Los Angeles, Calif
15238	I T T, Semiconductor Div, Lawrence, Mass
15605	Cutler Hammer Inc, Milwaukee, Wisc 53233
16037	Spruce Pine Mica Co, Spruce Pine, N C
16636	Indiana General Corp, Oglesby, Ill 61348
17771	Singer Co, Diehl Div, Somerville N J
17856	Siliconix, Inc., Sunnyvale, Calif 94086
18736	Voltronics Corp, Hanover N J 07936
19396	Illinois Tool Works, Paklon Div, Chicago, Ill
19048	Computer Diode Corp, S Fairlawn, N J 07410
19617	Cutlron Corp Chicago, Ill 60627
19644	LRC Electronics, Horseheads, N Y.
19701	Electra Mfg Co, Independence, Kansas 67301
20754	KMC Semiconductor Corp , Long Valley, N J 07853
21335	Fafnir Bearing Co, New Britain, Conn
22753	United Electron Corp, Hollywood, F a
23342	Avnet Electronics Corp, Franklin Park, r l
24446	G E , Schenectady, N Y 12305
24454	G E , Electronics Comp, Syracuse, N Y
24455	G E (Lamp Div), Nela Park, Cleveland, Ohio
24655	General Radio Co, W Concord, Mass 01781
26806	American Zettlet Inc, Costa Mesa, Calif
28520	Hayman Mfg Co, Kenilworth, N J
28959	Hoffman Electronics Corp Ei Monte, Calif
30646	Beckman Instruments Inc, Cedar Grove, N J 07009
30874	I B M , Armonk, New York
32001	Jensen Mfg Co, Chicago, Ill 60638
33173	G E Comp, Owensboro, Ky 42301
34141	Koehler Mfg Co Inc , Marlboro, Mass 01752
35259	Constanta Co, Mont 19, Que

Code	Manufacturer
37942	P R Mallory & Co Inc Indianapolis, Ind
38443	Martin Rockwell Corp, Jamestown, N Y
40931	Honeywell Inc, Minneapolis, Minn 55408
42190	Muter Co, Chicago Ill 60638
42498	National Co, Inc, Melrose, Mass 02176
43981	Norma Hoffman, Stanford, Conn 06904
49671	RCA New York, N Y 10020
49956	Raytheon Mfg Co, Waltham Mass 02154
50021	Sangamo Electric Co, Springfield, Ill 62705
54294	Shallcross Mfg Co, Selma, N C
54715	Shure Brothers Inc Evanston Ill
56289	Sprague Electric Co, N Adams, Mass
59730	Thomas and Betts Co Elizabeth, N J 07207
59875	TRW Inc (Accessories Div) Cleveland, Ohio
60299	Torrington Mfg Co Torrington, Conn
61637	Union Carbide Corp New York, N Y 10017
61864	United Carr Fastener Corp Boston Mass
63060	Victoreen Instrument Co, Inc, Cleveland, O
63743	Ward Leonard Electric Co, Mt Vernon, N Y
65083	Westinghouse (Lamp Div), Bloomfield, N J
65092	Weston Instruments Newark, N J
70485	Atlantic India Rubber Chicago, Ill 60607
70563	Amperite Co, Union City, N J 07087
70903	Belden Mfg Co, Chicago, Ill 60644
71126	Bronson Homer D Co, Beacon Falls Conn
71279	Cambridge Thermionic Corp, Camb Mass 02138
71294	Canfield, H O Co Clinton Forge, Va 24422
71400	Bussman (McGraw Edison) St Louis Mo
71450	CTS Corp Elkhart Ind 46514
71468	ITT Cannon Elec, L S., Calif 90031
71590	Centralab, Inc, Milwaukee, Wisc 53212
71666	Continental Carbon Co, Inc, New York, N Y
71729	Crescent Box Corp, E Phila, Penn 19134
71707	Coto Coil Co, Inc, Providence R I
71744	Chicago Miniature Lamp Works Chicago, Ill
71785	Cinch Mfg Co, Chicago, Ill 60624
71813	Darnell Corp, Ltd, Downey, Calif 90241
72136	Electro Motive Mfg Co Willmington, Conn
72259	Nytronics Inc Berkeley Heights, N J 07922
72619	Dialight Co Brooklyn, N Y 11237
72699	General Instr Corp, Newark, N J 07104
72765	Drake Mfg Co, Chicago, Ill 60656
72825	Hugh H Eby Inc, Philadelphia Penn 19144
72962	Elastic Stop Nut Corp, Union, N J 07083
72982	Erie Technological Products Inc, Erie, Penn
73138	Beckman Inc, Fullerton, Calif 92634
73445	Amperex Electronics Co, Hicksville, N Y
73559	Carling Electric Co, W Hartford, Conn
73690	Elco Resistor Co, New York, N Y
73899	J F D Electronics Corp Brooklyn, N Y 11219
74193	Heinemann Electric Co, Trenton, N J
74868	Industrial Condenser Corp, Chicago, Ill 60618
74868	Amphenol Corp, Danbury, Conn 06810
74970	E F Johnson Co, Waseca, Minn 56093
75042	IRC Inc, Philadelphia, Penn 19108
75382	Kulka Electric Corp Mt Vernon, N Y
75491	Lafayette Industrial Electronics, Jamaica N Y
75608	Linden and Co, Providence, R I
75915	Littelfuse, Inc, Des Plaines, Ill 60016
76005	Lord Mfg Co, Erie, Penn 16512
76149	Mallory Electric Corp Detroit, Mich 48204
76487	James Millen Mfg Co , Malden, Mass 02148
76545	Mueller Electric Co , Cleveland, Ohio 44114
76684	National Tube Co, Pittsburg, Penn
76854	Oak Mfg Co, Crystal Lake, Ill
77147	Patton MacGuyer Co, Providence, R I
77165	Pass Seymour, Syracuse N Y
77263	Pierce Roberts Rubber Co, Trenton N J
77339	Positive Lockwasher Co, Newark N J
77342	American Machine & Foundry Co, Princeton Ind 47570
77542	Ray O Vac Co, Madison Wisc
77630	TRW, Electronic Comp, Camden, N J 08103
77638	General Instruments Corp, Brooklyn, N Y
78189	Shakeproof III Took Works), Elgin, Ill 60120
78277	Sigma Instruments Inc, S Braintree, Mass
78488	Stackpole Carbon Co, St Marys, Penn
78553	Tinnerman Products, Inc, Cleveland, Ohio
79089	RCA, Rec Tube & Semicond, Harrison, N J
79725	Weremold Co, Hartford, Conn 06110
79963	Zierick Mfg Co, New Rochelle, N Y
80009	Tektronix Inc, Beaverton Ore 97005
80030	Prestole Fastener, Toledo, Ohio
80048	Vickers Inc, St Louis, Mo
80131	Electronic Industries Assoc, Washington, D C
80183	Sprague Products Co, No Adams, Mass
80211	Motorola Inc , Franklin Park, Ill 60131
80258	Standard Oil Co, Lafeyette, Ind
80294	Bourns Inc, Riverside, Calif 92506
80368	Sylvania Electric Products Inc, N Y 10017

Code	Manufacturer
80431	Air Filter Corp Milwaukee, Wisc 53218
80583	Hammarlund Co, Inc, New York, N Y
80740	Beckman Instruments, Inc, Fullerton, Calif
80894	Pure Carbon Co , St Marys, Penn 15857
81030	International Instrument, Orange, Conn
81073	Grayhill Inc, LaGrange, Ill 60525
81143	Isolantite Mfg Corp Stirling, N J 07980
81349	Military Spec fications
81350	Joint Army Navy Specif cations
81386	Fenwal Electronics, Framingham, Mass 01701
81483	International Rectifier Corp, El Segundo, Calif 90245
81751	Columbus Electronics Corp, Yonkers, N Y
81831	Filtron Co, Flushing, L I , N Y 11354
81840	Ledex Inc, Dayton, Ohio 45402
81860	Barry Wright Corp, Watertown, Mass
82219	Sylvania Elec Prod, Emporium, Penn
82273	Indiana Pattern & Model Works, LaPort Ind
82389	Switchcraft Inc, Chicago, Ill 60630
82647	Metals & Controls Inc, Attleboro, Mass
82801	Milwaukee Resistor Co, Milwaukee, Wisc
82877	Rotron Mfg Co Inc , Woodstock, N Y 12498
83033	Meissner Mfg, (Maguire Ind) Mt Carmel, Ill
83058	Carr Fastener Co, Cambridge Mass
83186	Victory Engineering, Springfield, N J 07081
83361	Bearing Specialty Co, San Francisco Calif
83587	Solar Electric Corp, Warren, Penn
83740	Union Carbide Corp, New York N Y 10017
83781	National Electronics Inc, Geneva, Ill
84411	TRW Capacitor Div Ogallala Nebr
84835	Lehigh Metal Prods, Cambridge, Mass 02140
84971	T A Mfg Corp, Los Angeles, Calif
86577	Precision Metal Prods, Stoneham, Mass 02180
86684	RCA (Elect Comp & Devl), Harrison, N J
86681	R E C Corp, New Rochelle, N Y 10801
86800	Cont Electronics Corp, Brooklyn, N Y 11222
88140	Cutler Hammer Inc, Lincoln, Ill
88219	Gould Nat Batteries Inc, Trenton N J
88419	Cornell Dubilier, Fuquay Varina, N C
88627	K & G Mfg Co, New York, N Y
89482	Holtzer Cabot Corp, Boston Mass
89665	United Transformer Co, Chicago, Ill
90201	Mallory Capacitor Co Indianapolis, Ind
90634	Gulton Industries, Inc, Metuchen, N J 08840
90750	Westinghouse Electric Corp, Boston, Mass
90952	Hardware Products Co Reading, Penn 19602
91032	Continental Wire Corp, York, Penn 17405
91146	I T T (Cannon Electric Ind) Los Angeles, Mass
91210	Gerber Mfg Co, Mishawaka, Ind
91293	Johanson Mfg Co Boonton, N J 07005
91506	Augat Inc, Attleboro, Mass 02703
91598	Chandler Co, Wethersfield Conn 06109
91637	Dale Electronics Inc, Columbus Nebr
91662	Elco Corp Willow Grove Penn
91719	General Instruments, Inc, Dallas Texas
91916	Mephisto Tool Co Inc Hudson, N Y 12534
91929	Honeywell Inc, Fraport, Ill
92519	Electra Insul Corp, Woodside, L I , N Y
92678	E G &G Boston Mass
92739	Ampex Corp, Redwood City, Calif 94063
93332	Sylvania Elect Prods Inc, Woburn, Mass
93618	R & C Mfg Co of Penn Inc, Ramey, Penn
93916	Cramer Products Co, New York, N Y 10013
94144	Raytheon Co, Components Div, Quincy, Mass
94154	Tung Sol Electric Inc, Newark, N J
94271	Weston Instruments Inc, Archbald, Penn 18403
94589	Dickson Co Chicago, Ill 60619
94800	Atlas Industrial Corp , Brooklyn, N H
95076	Gardie Mfg Co , Cumberland, R I
95121	Quality Components Inc, St Mary s, Penn
95146	Alco Electronics Mfg Co Lawrence Mass
95238	Continental Connector Corp Woodside, N Y
95275	Vitramon, Inc Bridgeport, Conn
95354	Methode Mfg Co, Chicago, Ill
95412	General Electric Co, Schnectady, N Y
95794	Anaconda Amer Brass Co, Torrington, Conn
96095	Hi Q Div of Aerovox Corp, Orlean, N Y
96214	Texas Instruments Inc, Dallas, Texas 75209
96296	Thordarson Meissner, Mt. Carmel, Ill
96341	Microwave Associates Inc, Burlington, Mass
96791	Amphenol Corp Janesville, Wisc 53545
96906	Military Standards
97464	Models Inc, North Bergen, N J
98291	Sealectro Corp, Mamaroneck, N Y 10544
98474	Compar Inc, Burlingame, Calif
98821	North Hills Electronics Inc , Glen Cove, N Y
99117	Metavac Inc, Flushing, N Y 11358
99180	Transitron Electronics Corp, Melrose, Mass
99313	Varian, Palo Alto, Calif 94303
99378	Atlee Corp, Winchester, Mass 01890
99800	Delevan Electronics Corp, E Aurora, N Y

2/13

PARTS LIST

REF NO	DESCRIPTION	PART NO	FED. MFG. CODE	MFG. PART NO.	FED. STK. NO.
CAPACITORS					
C101	Plastic, 0.1μF ±1% 100 V	4860-8249	84411	GR-8 0.1 μF ±1%	
C102	Alum, 100 uF, 15 V	4450-2800	56289	D17872, 100 uF, 15 V	5910-977-2453
C103	Mylar, .1 uF, ±1%, 100 V	4860-8240	84411	663UW, .1 uF, ±10% 100 V	
C104	Ceramic, 0.0015μF ±10% 500 V	4406-2158	72982	811, 0.0015 μF ±10%	
C105A	Electrolytic, 1500μF 15 V	4450-0700	90201	203828510C10X2	5910-976-9415
C105B,C	Electrolytic, 1500μF 25 V	4450-0700	90201	203828510C10X2	5910-976-9415
C106	Ceramic, 0.0022μF ±10%	4406-2228	72982	811, 0.0022 μF ±10%	
C107	Ceramic, 680pF ±20% 500 V	4404-1689	72982	831, 680 pF ±20%	
C108	Plastic, 0.033μF ±10% 100 V	4860-7865	84411	663UW, 0.033 μF ±10%	
C109 and C110	Alum, 100 uF, 15 V	445-2800	56289	D17872, 100 uF, 15V	5910-977-2453
C111	Mica, 3300 pF, ±10%, 500 V	4570-1333	14655	5A, 3300 pF, ±10% 500 V	
C112	Electrolytic, 5μF +100-10% 50 V	4450-3900	37942	2040595S9C10X3	5910-448-5527
C501	Ceramic, 0.0033μF ±20% 500 V	4406-2339	72982	811, 0.0033 μF ±20%	
C502	Ceramic, 0.0033μF ±20% 500 V	4406-2339	72982	811, 0.0033 μF ±20%	
C503A	450μF 100 V				
C503B	Electrolytic, 225μF 100 V	4450-4000	74861	1B85 ORT	5910-448-5397
C503C	225μF 100 V				
RESISTORS					
R101	Film, 32.0 k ohms, ±1/2%, 1/4 W	6351-2320	03888	PME60, 32.0 k ohms, ±1/2%	
R102	Film, 32.0 k ohms, ±1/2%, 1/4 W	6351-2320	03888	PME60, 32.0 k ohms, ±1/2%	
R103	Film, 26.7 k ohms, ±1/2%, 1/4 W	6351-2267	03888	PME60, 26.7 k ohms, ±1/2%	
R104	Film, 26.7 k ohms, ±1/2%, 1/4 W	6351-2267	03888	PME60, 26.7 k ohms, ±1/2%	
R105	Film, 16.0 k ohms, ±1/2%, 1/4 W	6351-2160	03888	PME60, 16.0 k ohms, ±1/2%	
R106	Film, 16.0 k ohms, ±1/2%, 1/4 W	6351-2160	03888	PME60, 16.0 k ohms, ±1/2%	
R107	Film, 13.3 k ohms, ±1/2%, 1/4 W	6351-2133	03888	PME60, 13.3 k ohms, ±1/2%	
R108	Film, 13.3 k ohms, ±1/2%, 1/4 W	6351-2133	03888	PME60, 13.3 k ohms, ±1/2%	
R109	Film, 8.00 k ohms, ±1/2%, 1/4 W	6351-1800	03888	PME60, 8.00 k ohms, ±1/2%	
R110	Film, 8.00 k ohms, ±1/2%, 1/4 W	6351-1800	03888	PME60, 8.00 k ohms, ±1/2%	
R111	Film, 4.00 k ohms, ±1/2%, 1/4 W	6351-1400	03888	PME60, 4.00 k ohms, ±1/2%	
R112	Film, 4.00 k ohms, ±1/2%, 1/4 W	6351-1400	03888	PME60, 4.00 k ohms, ±1/2%	
R113	Film, 3.20 k ohms, ±1/2%, 1/4 W	6351-1320	03888	PME60, 3.20 k ohms, ±1/2%	
R114	Film, 3.20 k ohms, ±1/2%, 1/4 W	6351-1320	03888	PME60, 3.20 k ohms, ±1/2%	
R115	Film, 1.60 k ohms, ±1/2%, 1/4 W	6351-1160	03888	PME60, 1.60 k ohms, ±1/2%	
R116	Film, 1.60 k ohms, ±1/2%, 1/4 W	6351-1160	03888	PME60, 1.60 k ohms, ±1/2%	
R117	Film, 800 ohms, ±1/2%, 1/4 W	6351-0800	03888	PME60, 800 ohms, ±1/2%	
R118	Film, 800 ohms, ±1/2%, 1/4 W	6351-0800	03888	PME60, 800 ohms, ±1/2%	
R119	Film, 320 ohms, ±1/2%, 1/4 W	6351-0320	03888	PME60, 320 ohms, ±1/2%	
R120	Film, 320 ohms, ±1/2%, 1/4 W	6351-0320	03888	PME60, 320 ohms, ±1/2%	
R121	Film, 160 ohms, ±1/2%, 1/4 W	6351-0160	03888	PME60, 160 ohms, ±1/2%	
R122	Film, 160 ohms, ±1/2%, 1/4 W	6351-0160	03888	PME60, 160 ohms, ±1/2%	
R123	Composition, 11 kΩ ±5% 1/2 W	6100-3115	01121	RC20GF113J	5905-279-2667
R124	Composition, 10 kΩ ±5% 1/2 W	6100-3105	01121	RC20GF103J	5905-185-8510
R125	Composition, 33 kΩ ±5% 1/2 W	6100-3335	01121	RC20GF333J	5905-171-1998
R126	Composition, 220 Ω ±5% 1/2 W	6100-1225	01121	RC20GF221J	5905-279-3513
R127	Composition, 150 Ω ±5% 1/2 W	6100-1155	01121	RC20GF151J	5905-299-1541
R128	Thermistor, 30 kΩ ±25%	6740-1402	02606	GB43V1	
R129	Potentiometer, carbon, 250 Ω ±20%	6040-0200	01121	FWC, 250 Ω ±20%	5905-072-7723
R130	Composition, 10 kΩ ±5% 1/2 W	6100-3105	01121	RC20GF103J	5905-185-8510
R131	Composition, 6.8 kΩ ±5% 1/2 W	6100-2685	01121	RC20GF682J	5905-279-3503
R132	Composition, 10 Ω ±5% 1/2 W	6100-0105	01121	RC20GF100J	5905-190-8883
R133	Composition, 680 Ω ±5% 1/2 W	6100-1685	01121	RC20GF681J	5905-195-6791
R134	Composition, 24 Ω ±5% 1/2 W	6100-0245	01121	RC20GF240J	5905-279-1750
R135	Composition, 1 kΩ ±5% 1/2 W	6100-2105	01121	RC20GF102J	5905-195-6806
R136	Composition, 2.2 kΩ ±5% 1/2 W	6100-2225	01121	RC20GF222J	5905-279-1876
R137	Composition, 24 Ω ±5% 1/2 W	6100-0245	01121	RC20GF240J	5905-279-1750
R138	Potentiometer, Carbon, 250 Ω ±10%	6000-0100	01121	JU, 250 Ω ±10%	
R139	Potentiometer, Wire-wound, 20 Ω ±5%	0971-3905	24655	0971-3905	
R140	Composition, 4.7 kΩ ±5% 1/2 W	6100-2475	01121	RC20GF472J	5905-279-3504
R141	Composition, 150 Ω ±5% 1/2 W	6100-1155	01121	RC20GF151J	5905-299-1541
R501	Wire-wound, 6.8 Ω ±10% 2 W	6760-9689	75042	BWH, 6.8 Ω ±10%	5905-930-2613
R502	Composition, 47 Ω ±5% 1/2 W	6100-0475	01121	RC20GF470J	5905-252-4018
R503	Composition, 2.2 kΩ ±5% 1/2 W	6100-2225	01121	RC20GF222J	5905-279-1876
R504	Composition, 2.2 kΩ ±5% 1/2 W	6100-2225	01121	RC20GF222J	5905-279-1876
R505	Wire wound, 0.47 ohms, ±10% 2 W	6760-8479	75042	BWH, 0.47%, ±10%	5905-075-9710
R506	Wire wound, 0.47 ohms, ±10%, 2 W	6760-8479	75042	BWH, 0.47%, ±10%	5905-075-9710

PARTS LIST - CONTINUED

REF NO	DESCRIPTION	PART NO	FED. MFG. CODE	MFG. PART NO.	FED. STK. NO.
MISCELLANEOUS					
CR501 thru CR504	DIODE, 1N3253	6081-1001	79089	IN3253	5961-814-4251
CR505	DIODE, 1N969B, 22-V ±5% Zener	6083-1058	04713	IN969B	
F502	FUSE, Slow-blow, 0.15 Amp (230V)	5330-0500	71400	MDL, 0.15 Amp.	
F502	FUSE, Slow-blow, 0.30 Amp (115V)	5330-0800	71400	MDL, .3 Amp.	5920-235-8362
J101	JACK, Binding post, insulated	0938-3000	24655	0938-3000	
J102	JACK, Binding post, insulated	0938-3000	24655	0938-3000	
J103	JACK, Binding post, insulated	0938-3022	24655	0938-3022	
J104	JACK, Phone	4260-1030	82389	#111	
PL501	PLUG, Power	4240-0210	24655	4240-0210	
P501	PILOT LIGHT, (Mazda #44)	5600-0700	24454	MAZDA 44	6240-057-2887
S101	SWITCH, Wafer	7890-3100	76854	Type H	
S102	SWITCH, Wafer	7890-3110	76854	224675-F1	
S501	SWITCH, Toggle	7910-1300	04009	83053-SA	5930-909-3510
T101	TRANSFORMER, Output	0745-4250	24655	0745-4250	
T501	TRANSFORMER, Power	0745-4240	24655	0745-4250	
Q101	TRANSISTOR, 2N1304	8210-1304	01295	2N1304	5961-892-0800
Q102	TRANSISTOR, 2N1305	8210-1305	96214	2N1305	5961-853-1079
Q103	TRANSISTOR, 2N1304	8210-1304	01295	2N1304	5961-892-0800
Q104	TRANSISTOR, 2N176	8210-1760	04713	2N176	
Q105	TRANSISTOR, 2N1305	8210-1305	96214	2N1305	5961-853-1079
Q106	TRANSISTOR, 2N176	8210-1760	04713	2N176	
Q501	TRANSISTOR, 2N1540	8210-1540	80211	2N1540	
Q502	TRANSISTOR, 2N3903	8210-1132	93916	2N3903	

Figure 5-5. Etched circuit board (P/N 1311-2701).

NOTE: The number appearing on the foil side is not the part number. The dot on the foil at the transistor socket indicates the collector lead.

1/2 WATT UNLESS OTHERWISE SPECIFIED
IN OHMS UNLESS OTHERWISE SPECIFIED
W = 1 MEGOHM K = 1000 OHMS
CE VALUES ONE AND OVER IN PICOFARDS
LESS THAN ONE IN MICROFARADS
UNLESS OTHERWISE SPECIFIED
IN SOME INSTRUMENTS
EWDRIVER ADJUSTMENT
CONTROL

FOR 1311

FREQUENCY

400Hz
200Hz
500Hz
120Hz
1kHz
100Hz
2kHz
60Hz
5kHz
50Hz
10kHz
S101

MAXIMUM OUTPUT
OPEN CIRCUIT 1 3 10 30 100 V
SHORT CIRCUIT 4000 1300 400 130 40 ma
S102

POWER
OFF ON
F501
T501
C501 0.0033
S501
AT506
C502 0.0033
F502
BR
AT501
25.5 V. AC
BL
P501
63 V AC
GN
R501 6.8 2W
AT502
CR501
CR502
CR503
CR504
AT503
+34V
Q501
Q502
R502 47
AT504
R503 2.2K
+20V
CR505
C503A,B 675 μF

FOR T501 CONNECTIONS.
115V OPERATION CONNECT #1 & #3
TO S501, #5 & #2, & #4 TO S501, #6
230V. OPERATION CONNECT #2 & #3
TO AT506

FOR 1311

FREQUENCY

50Hz 60Hz 100Hz 120Hz 200Hz 400Hz 500Hz 1kHz 2kHz 5kHz 10kHz

302F 303F 304F 305F 306F 307F 308F 309F 310F 311F 312F

R101 32.1K R103 26.8K R105 16.1K R107 13.4K R109 8.03K R111 4.01K R113 3.21K R115 1.61K R117 803 R119 321 R121 161

202F 203F 204F 205F 206F 207F 208F 209F 210F 211F 212F

R102 32.1K R104 26.8K R106 16.1K R108 13.4K R110 8.03K R112 4.01K R114 3.21K R116 1.61K R118 803 R120 321 R122 161

102F 103F 104F 105F 106F 107F 108F 109F 110F 111F 112F

S101

201F 201R 301F 301R

SECTION2 SECTION3

FRONT REAR FRONT REAR

C101 0.1
AT101
S101, 301R
R123 11K
C106 0022
S101, 201R
AT 102
AT 103
C103 0.1
C102 100μF
C104 0.0015
R124 10K

Rotary switch sections are shown as viewed from the panel end of the shaft. The first digit of the contact number refers to the section. The section nearest the panel is 1, the next section back is 2, etc. The next two digits refer to the contact. Contact 01 is the first position clockwise from a strut screw (usually the screw above the locating key), and the other contacts are numbered sequentially (02, 03, 04, etc), proceeding clockwise around the section. A suffix F or R indicates that the contact is on the front or rear of the section, respectively.

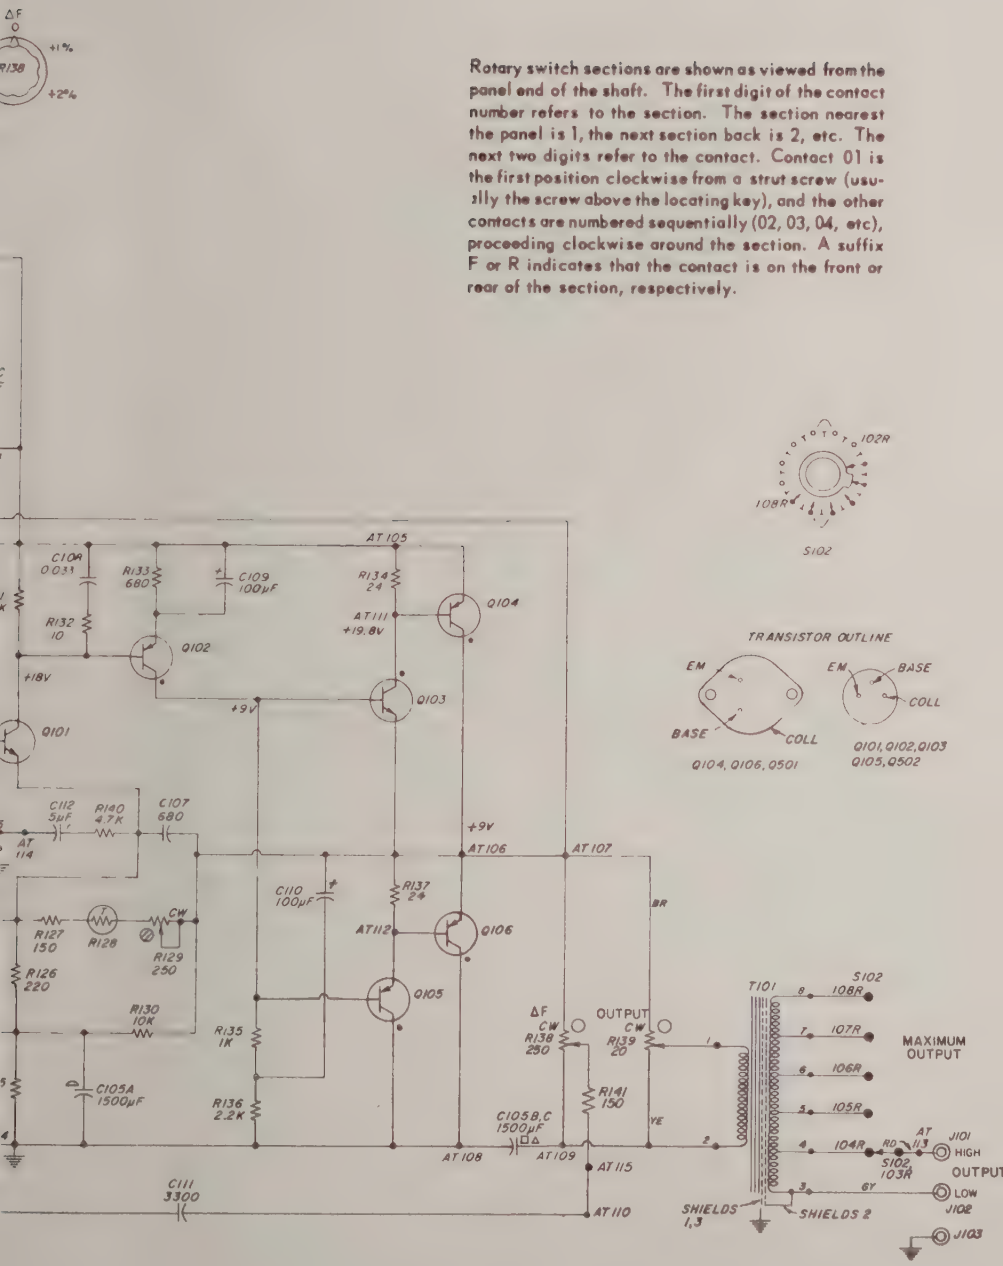

Figure 5-2. Schematic Diagram.

General Radio

300 BAKER AVENUE, CONCORD, MASSACHUSETTS 01742

***NEW YORK**
Delaware, New Jersey, New York, Eastern Pennsylvania
380 Midland Avenue, Saddle Brook, NJ 07662
Telephone: (NJ) 201 791-8990 (NY) 212 964-2722
TWX: 710 988-2205

***BOSTON**
Connecticut, Maine, Massachusetts, New Hampshire, Rhode Island, Vermont
(SALES)
Bolton, MA 01740
Telephone: 617 646-0550
(SERVICE)
300 Baker Ave., Concord, MA 01742
Telephone: 617 369-8770 • TWX: 710 347-1051

***WASHINGTON, D.C.**
Maryland, Virginia, West Virginia, (Wash. D.C.)
15 Firstfield Road, Gaithersburg, MD 20760
Telephone: 301 948-7071 • TWX: 710 828-9741

ATLANTA
Alabama, Florida, Georgia, Mississippi, North Carolina, South Carolina, Tennessee
7 Dunwoody Park, Suite 115, Atlanta, GA 30341
Telephone: 404 394-5380, (FLA) 813 531-0148

DAYTON
Kentucky, Indiana, Michigan, Ohio, Western Pennsylvania
3300 S. Dixie Drive, Dayton, OH 45439
Telephone: 513 294-1500 • TWX: 810-459-1785

***CHICAGO**
Illinois, Iowa, Kansas, Minnesota, Missouri, Nebraska, North Dakota, South Dakota, Wisconsin
9440 West Foster Avenue, Chicago, IL 60656
Telephone: 312 992-0800 • TWX: 910 221-5486

***DALLAS**
Arkansas, Colorado, Louisiana, New Mexico, Oklahoma, Texas, Wyoming
777 So. Central Expressway, Suite 4-A, Richardson, TX 75080
Telephone: 214 234-3357 • TWX: 910 867-4771

***LOS ANGELES**
Arizona, Southern California, Hawaii, Nevada (Clark County only)
17361 Armstrong Avenue
Irvine Industrial Complex, Irvine, CA 92705
Telephone: 714 540-9830 • TWX: 910 595-1762

***SAN FRANCISCO**
Northern California, British Columbia, Idaho, Montana, Nevada (except Clark County), Oregon, Washington, Utah
1050 East Meadow Circle, Palo Alto, CA 94303
Telephone: 415 948-8233 • TWX: 910 373-1203
Alaska 907 279-5741

CANADA
***General Radio Canada Limited**
307 Evans Avenue, Toronto, Ontario M8Z 1K2
Telephone: 416 252-3395 • TELEX: 06-967624
Montreal 514 737-2126 • **Ottawa** 613 233-4237

EUROPE, AFRICA, and NEAR EAST
***General Radio Company (Overseas)**
P. O. Box, CH-8034 Zurich, Switzerland
Telephone: (01) 55 24 20 • TELEX: 845-53638
***Paris** 355 7546 • **Lyon** 28 01 45 • ***Milan** 0039 2 20 00 39
• ***Munich** 89-40-18-01 • **Hamburg** 45 06 56 • ***Bourne End (England)** 22567

***ASIA, PACIFIC, and LATIN AMERICA**
General Radio International Division
Concord, Mass 01742
Cable: GENRADCO CONCORD (Mass) • TELEX: 923-354

GR COMPANIES • Grason-Stadler • Time/Data • Techware Computing Company

---

*Service Facilities

Printed in USA

R. D. D. 238

i/SB